


1. Attach weapon to either hand of figure as shown.
2. Press and turn lever on back of figure to activate the weapon twirling action.
3. To activate the torso spinning and forearm twirling action, squeeze right leg in.

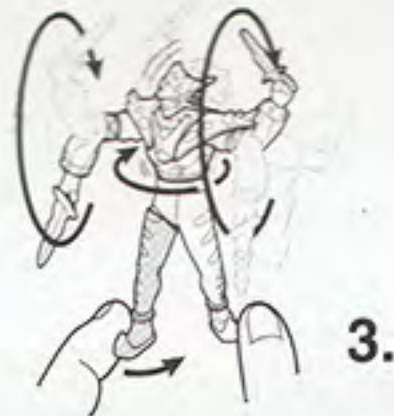

⚠ WARNING:
CHOKING HAZARD - Small parts.
Not for Children under 3 years.

PROOF OF PURCHASE