




WARNING:


**CHOKING HAZARD - Small parts.
Not for Children under 3 years.**

**To activate the LIGHTSTAR
POWER RANGER™ you must
remove the tab from the back.
Press the button on the back
to illuminate the helmet!**

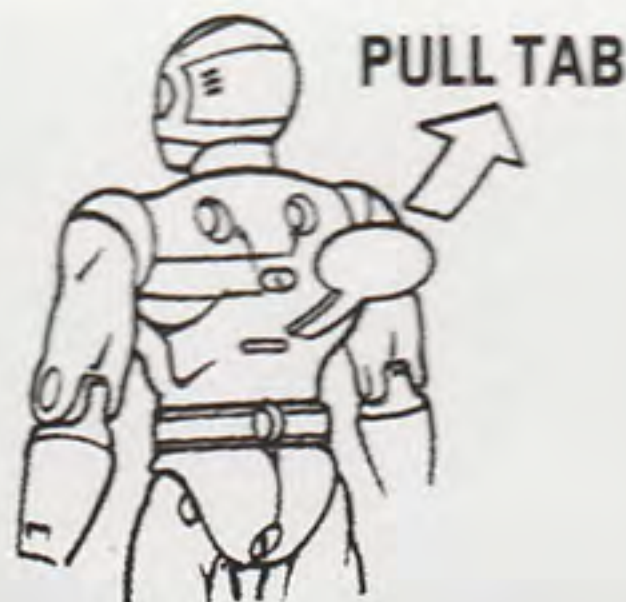

BATTERY REPLACEMENT

**Have an adult help you when it
is time to replace the batteries.
Using a screw driver, remove
the four screws from the
Power Rangers back.
Hold the figure together and
place it on it's back.**

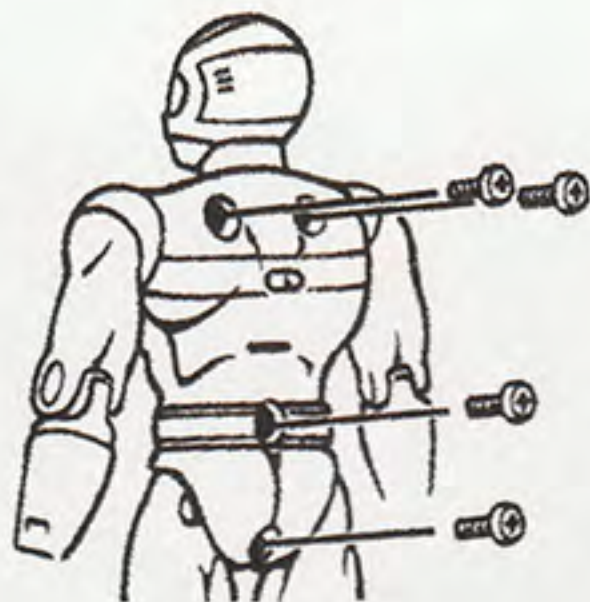

CAUTION:

Batteries may be harmful if swallowed.

Do not mix old and new batteries.

Do not mix alkaline, standard (carbon-zinc), or rechargeable (nickel-cadmium) batteries.



PROOF OF PURCHASE

Lift the chest plate off the toy and remove the batteries. Tweezers may be helpful in removing the batteries. Insert two LR44 batteries making sure to match "+" and "-" as indicated. Replace the chest plate and screws.

