




## **WARNING:**


**CHOKING HAZARD - Small parts.  
Not for Children under 3 years.**

**To activate the LIGHTSTAR  
POWER RANGER™ you must  
remove the tab from the back.  
Press the button on the back  
to illuminate the helmet!**

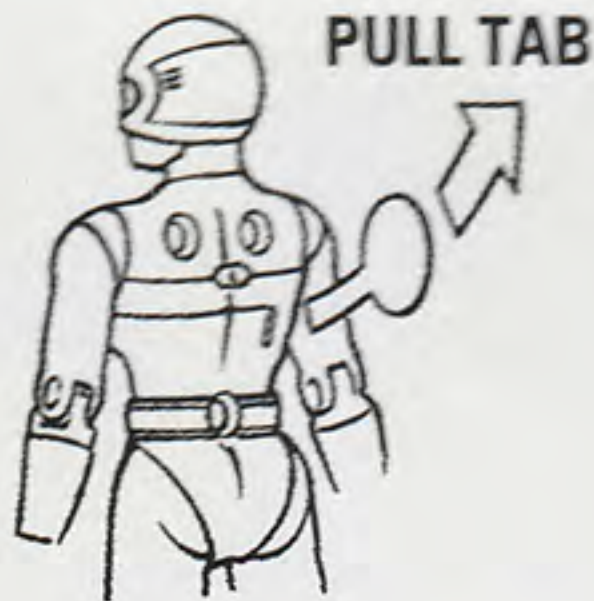

## **BATTERY REPLACEMENT**

**Have an adult help you when it  
is time to replace the batteries.  
Using a screw driver, remove  
the three screws from the  
Power Rangers back.  
Hold the figure together and  
place it on it's back.**

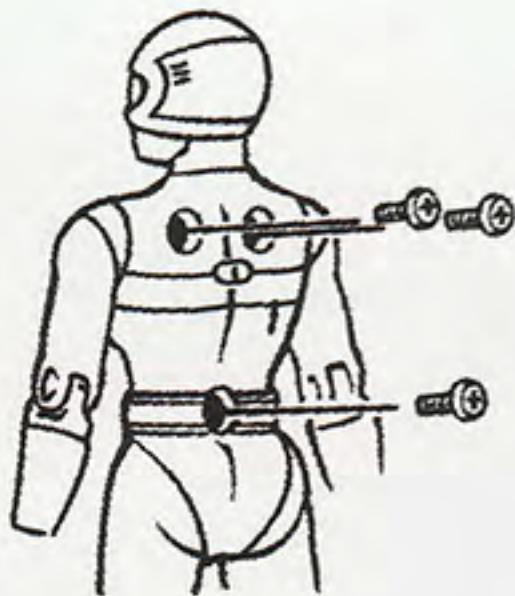

**CAUTION:**

Batteries may be harmful if swallowed.

*Do not* mix old and new batteries.

*Do not* mix alkaline, standard (carbon-zinc), or rechargeable (nickel-cadmium) batteries.



**PROOF OF PURCHASE**

**Lift the chest plate off the toy and remove the batteries. Tweezers may be helpful in removing the batteries. Insert two LR44 batteries making sure to match "+" and "-" as indicated. Replace the chest plate and screws.**

