



GALAXY MORPHER™



Asst. #4275 / Item #4278

WARNING:
CHOKING HAZARD - Small parts.
Not for Children under 3 years.

Requires 2 AAA batteries. Batteries not included.

CAUTION: Keep batteries away from children. Batteries may be harmful if swallowed.

NOTE: Make sure you use two new batteries. Do not mix old and new batteries. Do not mix alkaline, standard (carbon-zinc) or rechargeable (nickel-cadmium) batteries.

CONTENTS



Galaxy Morpher


Activation Key

Wrist Band

HOW TO INSERT BATTERIES


Unscrew the battery cover and remove it from the Galaxy Morpher. Insert 2 AAA batteries, as shown, and reattach the battery cover. Tighten the screw by turning it clockwise.

Use only standard or alkaline batteries. Do not mix old and new batteries. Do not mix alkaline, standard or rechargeable batteries.

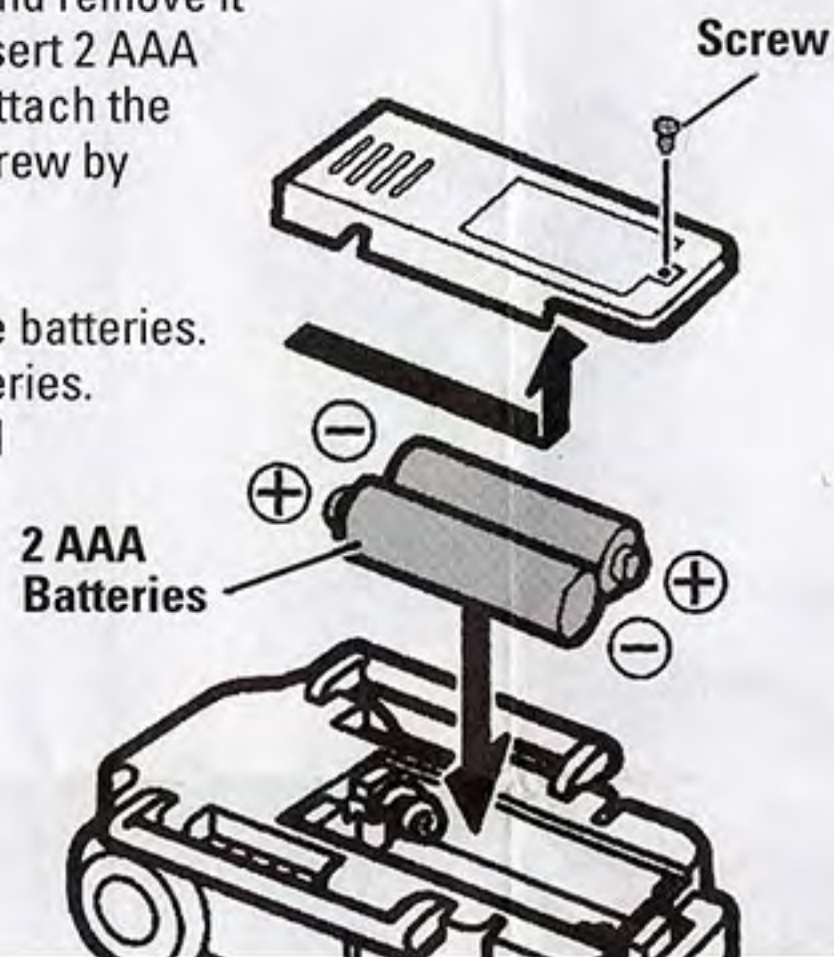


HOW TO USE KEY

1
To close the key, rotate the blade of the key around and into the handle until it locks in place, as shown by the arrows on the right.

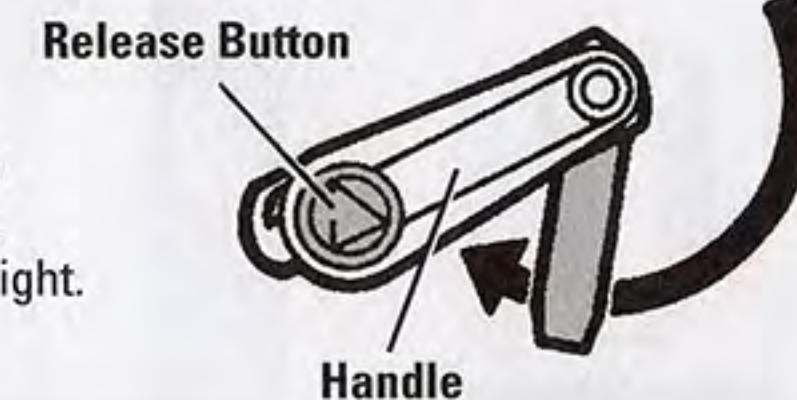


2
To open the key, press the release button and the blade will automatically spring out.

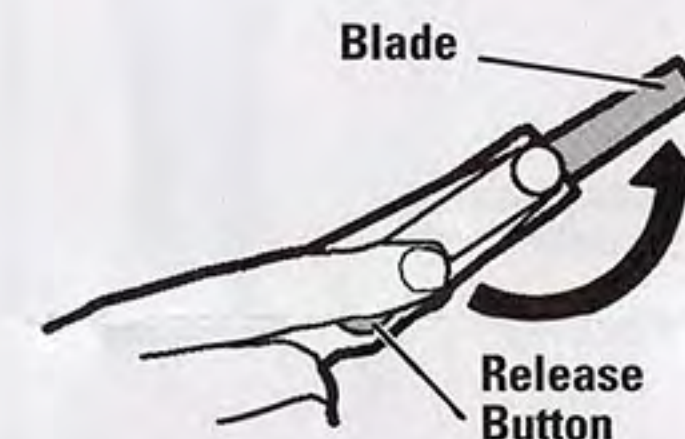


HOW TO ATTACH WRIST BAND

Attach the wrist band to the Galaxy Morpher by threading it through the slots and around the back of the morpher, as shown by the arrows in the illustration on the right.


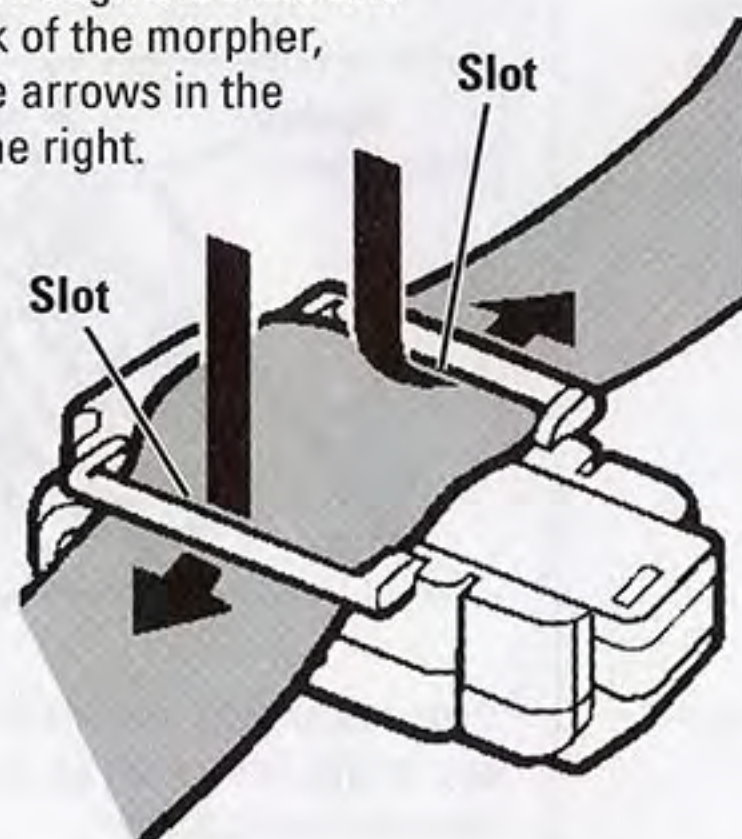


HOW TO PLAY WITH THE GALAXY MORPHER

1
Insert the key into the keyhole, as shown in the illustration below.

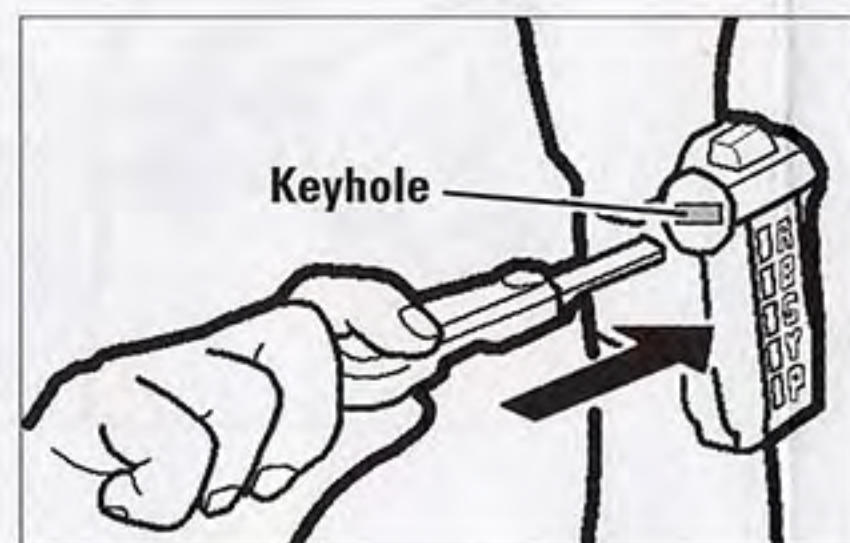

2
Turn the key clockwise to activate the Galaxy Morpher's lights and sound effect.

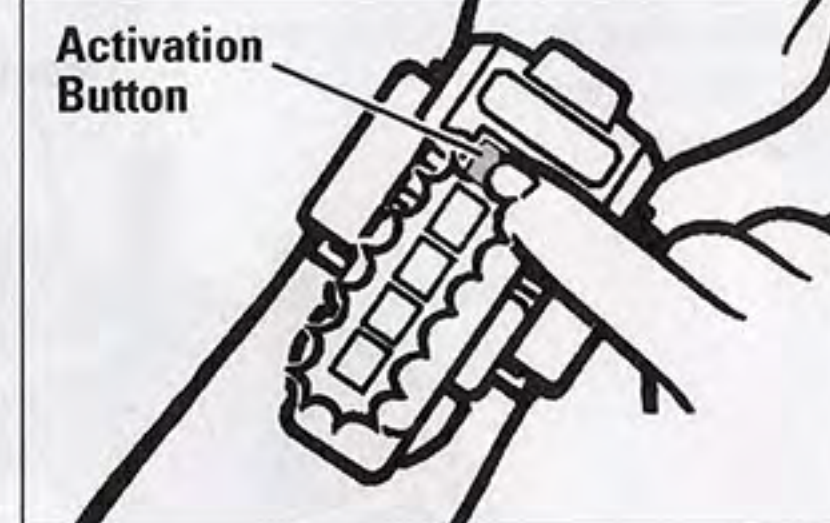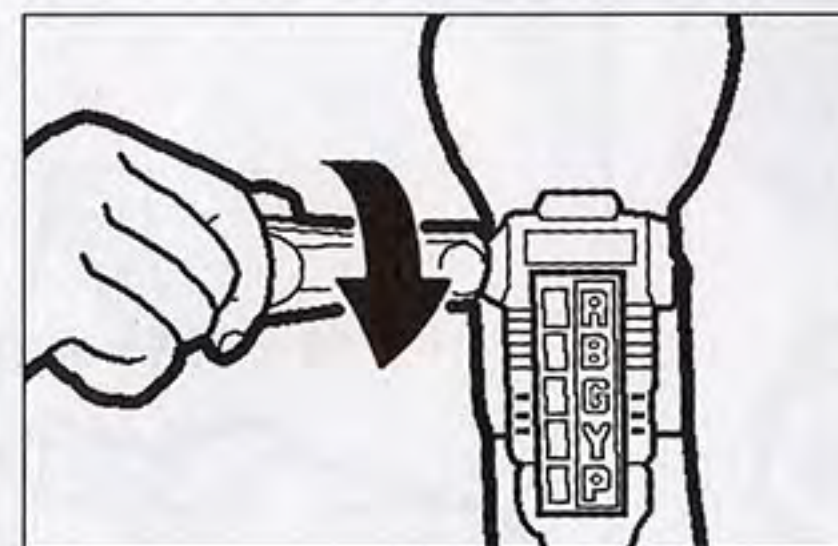

You can also activate different lights and sound sequences by pressing the activation button.